



E V O L U T I O N™

Introducing a whole new look at modular workstations.



K E W A U N E E

***The faster things change,
the faster you have to adapt.***

Your workplace is constantly evolving. Jobs change. Technicians come and go. OSHA requirements shift. All faster and faster every day.

That's why we created Evolution,[™] a totally modular system designed to conform in a matter of seconds.

Worktops adjust up and down independently. Shelves raise and lower to suit different tasks and equipment. Bin bars adjust up and down, front to back.

And since Evolution has fewer parts, adjustment is quick and easy.

If electrostatic discharge is a concern, you'll be glad to know Evolution offers the latest in ESD protection. Your sensitive circuitry is protected

from static electricity. And you're protected from costly damage.

Evolution grows as you grow.

Change always seems to happen at the worst possible moment.


But with Evolution, your work won't come to a standstill. Just attach more benches as your workload gets heavier.

An assortment of mobile accessories makes adapting to new situations even faster.

Plus, Evolution lets you accomplish different job functions in one combined station. You can easily adjoin management stations to assembly stations as the job requires.



Bow pulls are available for the sleek new drawer fronts. The drawers operate smoothly on ball-bearing glides.

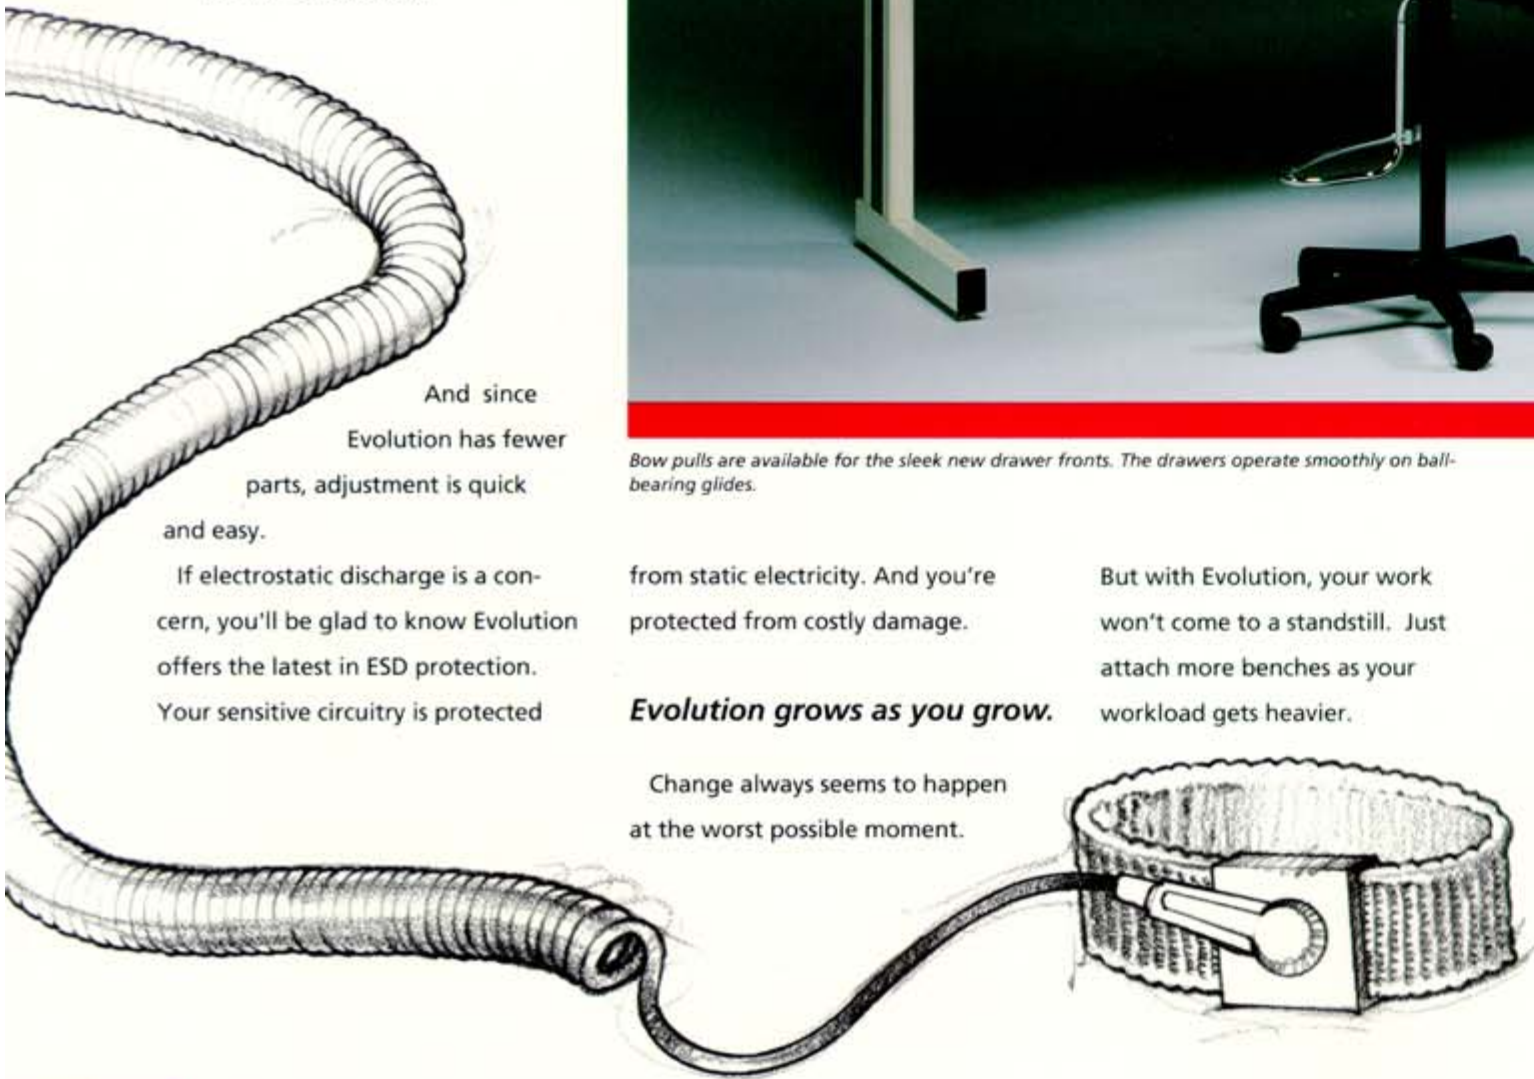


This L-shaped workstation blends management and assembly stations in one space-saving unit.



Worksurfaces, storage, shelving and lighting easily adjust to different heights: 76" columns for overhead storage and lights; 36" columns for technical heights; and 30" columns for sit-down levels.

How to increase your productivity even before your workers walk in the door.

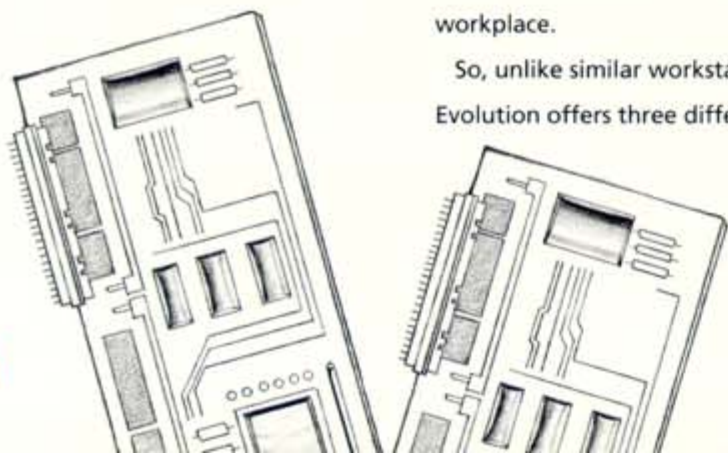

Sometimes, to end up with more productive workers, you have to start with a more comfortable workplace.

So, unlike similar workstations, Evolution offers three different

heights: 76-inch columns for overhead storage, shelving and lights; 36-inch columns for technical heights; or 30-inch columns for sit-down levels.

For added comfort, we offer foot-rails to rest your feet.

Instilling a professional attitude in your employees starts with installing a professional image in your workplace.

Evolution utility management raceways conveniently conceal electrical, air, data and phone lines. The result is a well-organized, professional appearance.

Cables can be hidden in the columns and out of the way.



Utility management raceways neatly conceal electrical, air, data and phone lines.



Unlike other raceways, ours can be placed anywhere on the column—front, back, above or below the worksurface.

Raceways may be attached to the front or the back of the columns – above or below the worksurface. Whichever arrangement you choose, Evolution lets you create an environment that's more comfortable to work with and ultimately more productive.



Complying with the most up-to-date OSHA requirements, Evolution readily adjusts to handicapped employees.


Double-sided benches save valuable workspace.




Storage that gives you what you need — when you need it.

Swing-arm accessories make Evolution a very flexible piece of equipment. Accessories—including parts-bin racks, magnifier lights, solder stations and monitor platforms—easily adjust both horizontally and vertically.

Adjustments along the column are not limited by fixed holes, so you can literally affix them anywhere on the column you desire.

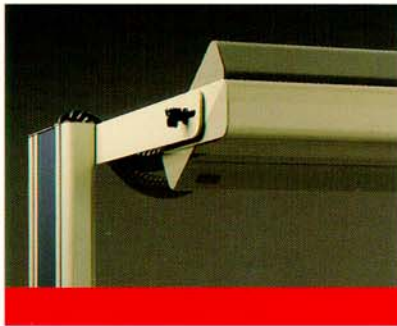

With a few simple adjustments, task lights can be aimed to fit the job at hand.

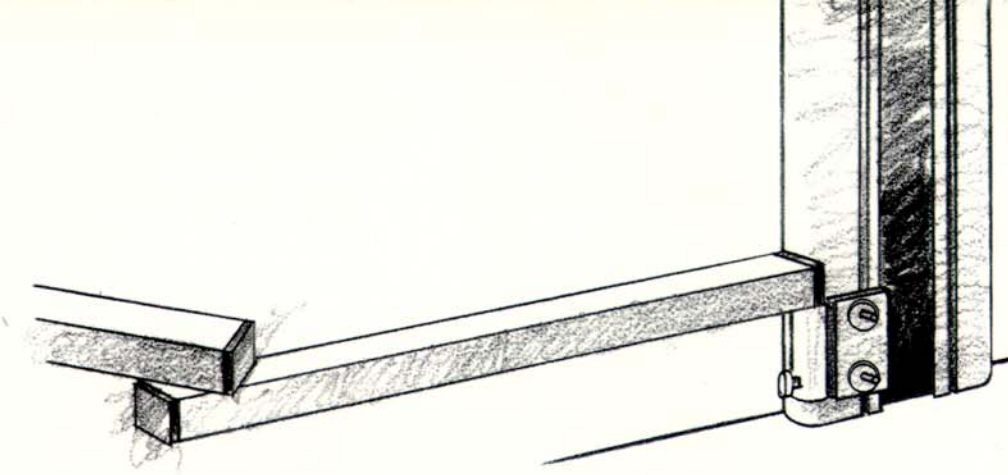

Swing-arm accessories easily move to precisely where the user needs them.

Monitor platforms quickly swing out when needed for use or out of the way when you don't need them at all.

Despite its streamlined appearance, Evolution is durable enough to handle different degrees of abuse around-the-clock.

Every Evolution configuration is supported by sturdy one-piece columns made of high-tempered

aluminum alloy.


The strong laminate tops are high-density, heat-resistant and non-glare. For extra protection, metal parts have baked, epoxy-powder coated finishes which provide superior chemical resistance.

The result is not only one of the most stable, most adjustable workbenches you can buy, but one of the toughest as well.




Worksurfaces readily conform to work habits and job requirements.

Accessories and Components

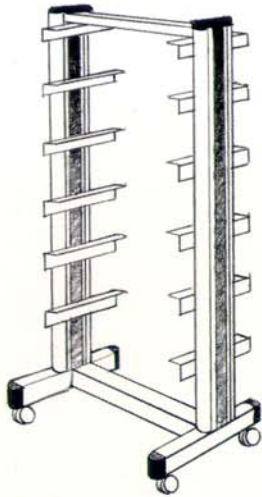

Tote Cart

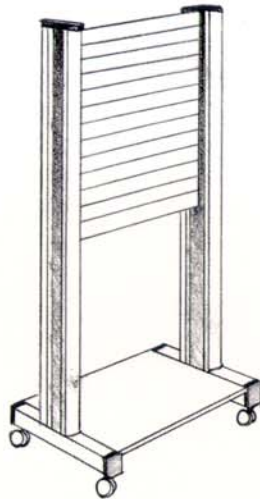

Bin Cart




Low Column Cart



12", 18" Deep Shelf



12" Deep Shelf w/ Lip



Fluorescent Task Light



18" Deep Shelf w/ Lip



Bin Bar




Wrist Strap Grounding System




Powered Backsplash



Tool Bar

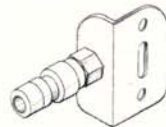

Quick Air Disconnect




Hanging 4" H Personal Drawer




Articulating Monitor Platform



Bottle Holder



Hanging 7" H Box Drawer

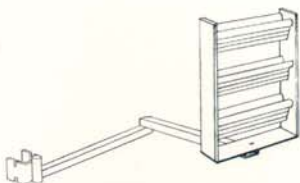


Articulating Bin Rack




Kimwipe Holder




Hanging 14" H File Drawer




Articulating Solder Station





Portable Footrest

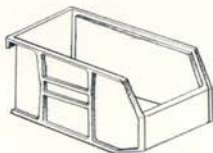

Parts Bin



Footrail

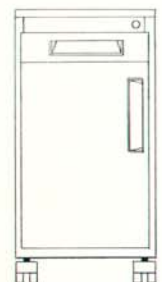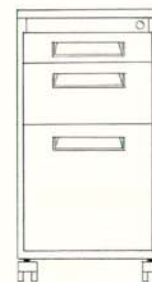


Lockable Mobile Storage Units

How to protect your company from ESD events.

Electronic devices are especially susceptible to electrical static discharges known as ESD events. ESD events create an Electrical Overstress which can completely destroy a device or damage the internal circuitry, which may cause it to fail at a later date. Damage caused by ESD events cost the electronics industry millions of dollars each year.

The key to reducing ESD events and controlling product losses is a program which encompasses the total environment from policies to product. Kewaunee supplies the highest quality workstations and accessories to provide ESD protection and offers guidance on developing and administering an ESD-control program.

All ESD worksurfaces are supplied with a complete grounding kit. This kit contains two grounding terminuses; one being used as the single workstation grounding point. The second grounding terminus is installed as a continuity test terminus. These terminuses are designed for quick and easy installation and will provide continuity with the static dissipative laminate.

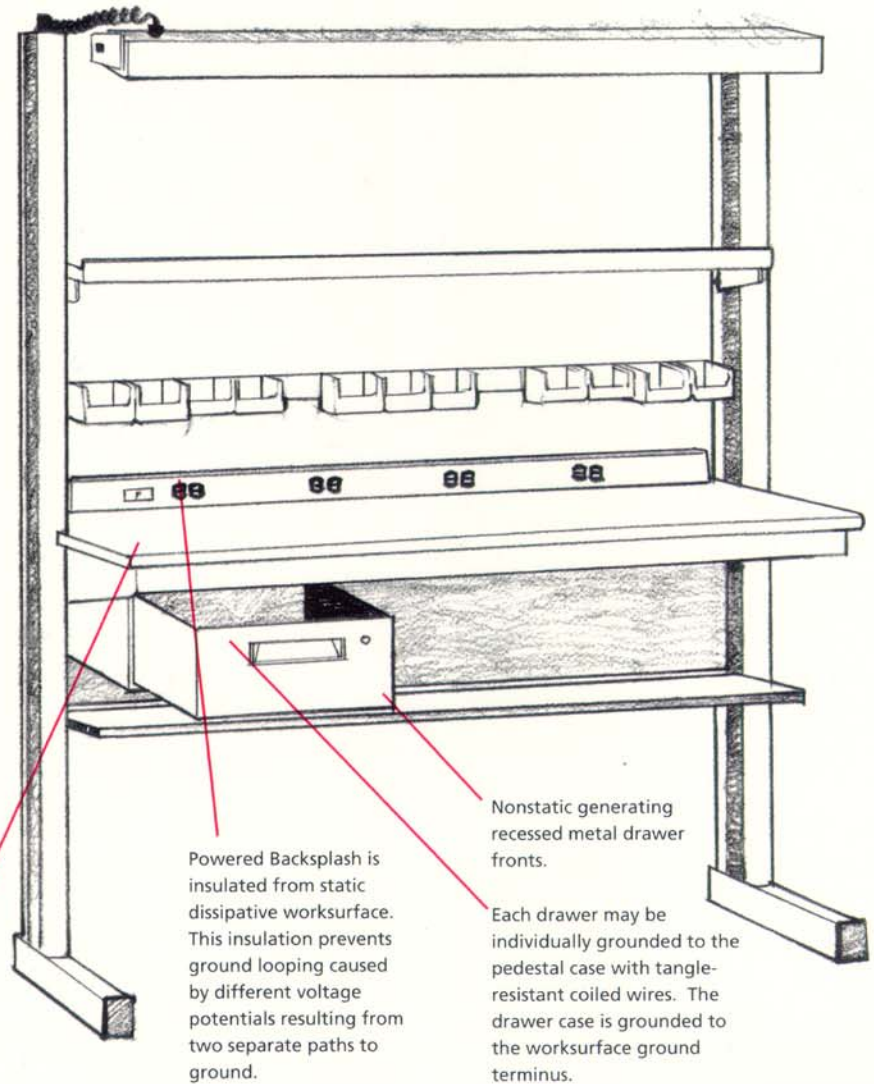

Powered Backsplash is insulated from static dissipative worksurface. This insulation prevents ground looping caused by different voltage potentials resulting from two separate paths to ground.

Nonstatic generating recessed metal drawer fronts.

Each drawer may be individually grounded to the pedestal case with tangle-resistant coiled wires. The drawer case is grounded to the worksurface ground terminus.

Evolution has a full range of colors to choose from.

Metal Colors:



Sand Tan



Flint Gray



White



Black

Standard Accent Colors:



Wineberry



Black



Brittany Blue



Natural Almond

Optional Accent Colors:



Tyrol Green



Cherry



Dresden Blue



Mahogany

Worksurface Colors:



Natural Almond



Dove Gray

Available for ESD only:



Natural Almond ESD



Dove Gray ESD



Dove Gray

Color may vary slightly from actual products. Paint is protected by a special chemical-resistant finish.

True flexibility takes more than modular furniture.

Making your workplace adaptable to change involves more than delivering workstations.

It involves making your deadlines our deadlines. Your priorities our priorities.

It means working and reworking configurations until you get exactly what you want.

It's making sure you're protected with extras like our one-year limited warranty.

In short, it's crafting individual problems into workable solutions.

We've been creating work environments for more than 80 years. We'd like to put this experience to work for you.

Call us at 1-800-824-6626. We'd be glad to discuss our products and services with you.

Then, if you like, one of our representatives will help you create workspace solutions that best fit your needs.



KEWAUNEE®
Scientific Corporation
Technical Products Group

2700 West Front Street
Statesville NC 28677
1-800-824-6626
Email: custsvc@kewaunee-tpg.com